

DIMPOST system variable

1468 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2246

Function Description:

The **DIMPOST** system variable is used to specify the text prefixes or suffixed (or both) for dimension measurement.

Type : Strings

Saved in : Drawing

Initial value : None

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1468>