

# DIMSAH system variable

1470 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2673

## Function Description:

The **DIMSAH** system variable is used to control the display of arrowhead block in dimension line.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off

## System Variable Value:

**off** : use the arrowhead block set by DIMBLK system variable

**on** : use the arrowhead block set by DIMBLK1 and DIMBLK2 system variable

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1470>