

# DIMSD1 system variable

1471 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2472

## Function Description:

The **DIMSD1** system variable is used to control whether to hide the first dimension line and arrowhead.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off

If this system variable set to on, it hides the extension line and arrowhead between the first extension line and text.

## System Variable Value:

**Off** : display the first dimension line

**On** : hide the first dimension line

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1471>