

## DIMSD2 system variable

1472 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1314

### Function Description:

The **DIMSD2** system variable is used to control whether to hide the second dimension line and arrowhead.

**Type :** Parameter

**Saved in :** Drawing

**Initial value :** Off

If this system variable set to on, it hides the extension line and arrowhead between the first extension line and text.

### System Variable Value:

**Off** : display the second dimension line

**On** : hide the second dimension line

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1472>