

DIMSE1 system variable

1473 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2353

Function Description:

The **DIMSE1** system variable is used to control whether to hide the first extension line.

Type : Parameter

Saved in : Drawing

Initial value : Off

System Variable Value:

Off : display the extension line

On : hide the extension line

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1473>