

## DIMSE2 system variable

1474 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2309

### Function Description:

The **DIMSE2** system variable is used to control whether to hide the second extension line.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off

### System Variable Value:

**Off** : display the extension line

**On** : hide the extension line

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1474>