

## DIMSHO system variable

1475 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2371

### Function Description:

The **DIMSHO** system variable is used to control the update of dimension distance when enlarging or shortening dimension objects.

**Type** : Switch

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1475>