

## DIMSOXD system variable

1476 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2003

### Function Description:

The **DIMSOXD** system variable is used to hide arrowheads when there is no sufficient space in extension line.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off

### System Variable Value:

**Off** : display arrowhead

**On** : hide arrowhead

If there is no sufficient space in extension line and the DIMITX is on, the setting of DIMSOXD is on without arrowhead. If DIMITX has set to be off, the DIMSOXD is disabled.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1476>