

## DIMTDEC system variable

1478 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2431

### Function Description:

The **DIMTDEC** system variable is used to set the number of decimal places displayed in tolerance values for primary units in a dimension.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 4(Imperial) or 2(Metric)

This system variable has no effect unless **DIMTOL** is set to On. The default for **DIMTOL** is Off.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1478>