DIMTVP system variable

1483 GstarCAD MY /KW July 13, 2021 System Variables 0 2312

Function Description:

The **DIMTVP** system variable is used to control the vertical position for dimension text above or below the dimension line.

Type: Real

Saved in : Drawing Initial value : 0.0000

It uses the **DIMTVP** value when the **DIMTAD** is off.

The vertical offset is created by text height and **DIMTVP** value.

Setting the **DIMTVP** to 1, the **DIMTAD** is set to be on.

The dimension line will be broken to place dimension text when the absolute value of **DIMTVP** smaller than 0.7.

Online URL: https://www.kb2.gstarcad.com.my/article.php?id=1483