

DIMTXSTY system variable

1484 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2337

Function Description:

The **DIMTXSTY** system variable is used to specify the dimension text styles.

Type : Strings

Saved in : Drawing

Initial value : Standard

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1484>