

DIMTXTDIRECTION system variable

1486 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2517

Function Description:

The **DIMTXTDIRECTION** system variable is used to specify the dimension text reading direction.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : display dimension text in left-to- right reading style

1 : display dimension text in right-to-left reading style

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1486>