

## DIMTXTDIRECTION system variable

1486 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2385

### Function Description:

The **DIMTXTDIRECTION** system variable is used to specify the dimension text reading direction.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### System Variable Value:

**0** : display dimension text in left-to- right reading style

**1** : display dimension text in right-to-left reading style

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1486>