

DIMZIN system variable

1490 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2370

Function Description:

The **DIMZIN** system variable is used to control the zero suppression for primary unit value.

Type : Integer

Saved in : Drawing

Initial value : 0 (Imperial) or 8 (Metric)

Range : 0 ~ 15

System Variable Value:

0 : suppress zero feet and zero inch

1 : include zero feet and zero inch

2 : u include zero feet and suppress zero inch

3 : include zero inch and suppress zero feet

4 : suppress the leading zero in decimal dimension

8 : suppress the trailing zero in decimal dimension

12 : suppress the leading zero and trailing zero

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1490>