

## DIVMESHBOXHEIGHT system variable

1493 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1469

### Function Description:

The **DIVMESHBOXHEIGHT** system variable is used to set the number of subdivisions for the height of a mesh box along the Z axis.

**Type :** Integer

**Saved in :** User-settings

**Initial value :** 3

This setting could affect the new mesh box created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1493>