DIVMESHPYRHEIGHT system variable

1500 GstarCAD MY /KW July 14, 2021 System Variables 0 2165

Function Description:

The **DIVMESHPYRHEIGHT** system variable is used to set the number of subdivisions from the base to top of mesh pyramid.

Type: Integer

Saved in : User-settings

Initial value: 3

This setting could affect the new mesh pyramid created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: https://www.kb2.gstarcad.com.my/article.php?id=1500