

## DIVMESHPTYRLENGTH system variable

1501 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1176

### Function Description:

The **DIVMESHPTYRLENGTH** system variable is used to set the number of subdivisions along each dimension of the base a mesh pyramid.

**Type :** Integer

**Saved in :** User-settings

**Initial value :** 3

This setting could affect the new mesh pyramid created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1501>