

## DIVMESHWEDGEBASE system variable

1508 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2090

### Function Description:

The **DIVMESHWEDGEBASE** system variable is used to set the number of subdivisions from the wedge perimeter middle point to triangle dimension.

**Type :** Integer

**Saved in :** User-settings

**Initial value :** 3

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1508>