

# DIVMESHWEDGEHEIGHT system variable

1509 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2140

## Function Description:

The **DIVMESHWEDGEHEIGHT** system variable is used to set the number of subdivisions for the height of a mesh wedge along the Z axis.

Type : Integer

Saved in : User-settings

Initial value : 3

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1509>