

## DIVMESHWEDGESLOPE system variable

1511 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2249

### Function Description:

The **DIVMESHWEDGESLOPE** system variable is used to set the number of subdivisions along the slope between the wedge vertex to base edge.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 3

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1511>