

## DIVMESHWEDGEWIDTH system variable

1512 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1375

### Function Description:

The **DIVMESHWEDGEWIDTH** system variable is used to set the number of subdivisions along the width of mesh wedge in Y axis.

**Type :** Integer

**Saved in :** User-settings

**Initial value :** 3

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1512>