

DONUTID system variable

1513 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2436

Function Description:

The **DONUTID** system variable is used to set the default inside of diameter for donuts.

Type : Real

Saved in : Not saved

Initial value : 0.5000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1513>