

# DRAGVS system variable

1518 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1574

## Function Description:

The **DRAGVS** system variable is used to set the display visual style when creating 3D solids, mesh metalfiles, extruded solids, surfaces, and meshes.

**Type :** Strings

**Saved in :** Drawing

**Initial value :** ""

Users could specify current visual style by inputting a period ".". The **DRAGVS** system variable could only set the visual style which stored in drawings.

The **DRAGVS** system variable will be disabled when the current visual style set to be 2D wireframe.

Users could not delete the visual style specified by **DRAGVS** system variable by **PURGE** command.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1518>