

DWFOSNAP system variable

1522 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2663

Function Description:

The **DWFOSNAP** system variable is used to control whether to active object snap mode for geometric drawing in attached DWF or DWFx reference underlay.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay

1 : disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1522>