

# DWGPREFIX system variable

1526 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2322

## Function Description:

The **DWGPREFIX** system variable is used to store the drawing driver and folder prefix.  
(Ready-Only)

**Type** : Strings

**Saved in** : Not saved

**Initial value** : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1526>