

## DYNCONSTRAINTMODE system variable

1529 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 2388

### Function Description:

The **DYNCONSTRAINTMODE** system variable is used to display hide dimension constraint when selected constrained objects.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### System Variable Value:

**0** : keep constrain hidden when selected objects

**1** : display hidden constrain when constrain objects selected

Note: when hidden dynamic constraint, this system variable takes effect.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1529>