

# EXPORTEPLOTFORMAT system variable

1545 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 2357

## Function Description:

The **EXPORTEPLOTFORMAT** system variable is used to set the default export format for electronic files: PDF, DWF or DWFx.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 2

**Range** : 0,1,2

## System Variable Value:

**0** :PDF

**1** : DWF

**2** :DWFx

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1545>