

# EXPORTPAPERSPACE system variable

1548 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 2387

## Function Description:

The **EXPORTPAPERSPACE** system variable is used to specify which part of drawing in layout space to export to a DWF, DWFx or PDF file.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

## System Variable Value:

**0** : display

**1** : extent

**2** : window

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1548>