

# EXTMAX system variable

1549 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 2208

## Function Description:

The **EXTMAX** system variable is used to store the value of right-top corner point in the drawing extents.  
(Read-Only)

**Type** : 3D point

**Saved in** : Drawing

**Initial value** : Unknown

If some new objects created outside of limits, users could use "**All**" or "**Extent**" option of **ZOOM** command to scale objects to new extents.

The **EXTMAX** system variable value is the world coordinate value in current space.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1549>