

# FACETERMESHTYPE system variable

1557 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 2489

## Function Description:

The **FACETERMESHTYPE** system variable is used to set type for new meshes.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 0

**Range** : 0,1,2

## System Variable Value:

**0** : convert objects to optimized mesh objects with fewer faces

**1** : convert objects to faces, most of them are quadrilaterals

**2** : convert objects to faces, most of them are triangles

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1557>