

# FACETERPRIMITIVEMODE system variable

1560 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1563

## Function Description:

The **FACETERPRIMITIVEMODE** system variable is used to specifies whether smoothness settings for objects that are converted to mesh are derived from the Mesh Tessellation Options or the Mesh Primitive Options dialog box.

**Type :** Bitcode

**Saved in :** User-settings

**Initial value :** 1

**Range :** 0,1

## System Variable Value:

**0** : apply the settings in mesh tessellation dialog box to converted objects

**1** : apply the settings in mesh primitive dialog box to converted objects

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1560>