

# FULLOPEN system variable

1573 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1776

## Function Description:

The **FULLOPEN** system variable is used to indicate whether the current drawing is partly opened or not.

(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : indicate that the drawing is partly opened

**1** : indicate that the drawing is fully opened

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1573>