

# GLOBALOPACITY system variable

1584 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 2307

## Function Description:

The **GLOBALOPACITY** system variable is used to set the global opacity level for all palettes.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 100

**Range** : 0 ~ 100

## System Variable Value:

**0** : completely transparency

**100** : completely opacity

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1584>