

## GRIPSIZE system variable

1599 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2259

### Function Description:

The **GRIPSIZE** system variable is used to set the size of grip frame by pixels.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 5

**Range** : 1 ~ 255

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1599>