

GTAUTO system variable

1602 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2724

Function Description:

The **GTAUTO** system variable is used to control whether to display 3D gizmos when starting a command before selecting objects in 3D visual style viewport.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : gizmos do not display automatically when selecting objects before starting a command

1 : gizmos display automatically after creating a selection set

The **GTAUTO** system variable could affect the display of gizmos of **3D MOVE**, **3D ROTATE**, and **3D SCALE**.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1602>