

## HALOGAP system variable

1605 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2472

### Function Description:

The **HALOGAP** system variable is used to specify the gap when one objects hidden by another object.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

The value of **HALOGAP** system variable is specified by a percent of one unit and is independent of the zoom level.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1605>