

HANDLES system variable

1606 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2255

Function Description:

The **HANDLES** system variable is used to report whether object handles could be accessed by application programs.
(Read-Only)

Type : Integer

Saved in : Drawing

Initial value : on

This system variable is only used to keep the integrity of scripts.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1606>