

HPANG system variable

1611 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2559

Function Description:

The **HPANG** system variable is used to set the angle of new hatch pattern,

Type : Integer

Saved in : Not saved

Initial value : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1611>