

## HPISLANDDETECTIONMODE system variable

1621 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2735

### Function Description:

The **HPISLANDDETECTIONMODE** system variable is used to control whether to detect internal closed boundary (named island).

**Type :** Integer

**Saved in :** Not saved

**Initial value :** 1

**Range:** 0,1

### System Variable Value:

**0 :** off

**1 :** on(recommended)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1621>