

## HPMAXLINES system variable

1622 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2474

### Function Description:

The **HPMAXLINES** system variable is used to set the maximum of hatch lines generated when hatching.

**Type** : Real

**Saved in** : Registry

**Initial value** : 300000

**Range** : 10 ~ 10000000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1622>