

# HPORIGIN system variable

1624 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2425

## Function Description:

The **HPORIGIN** system variable is used to set hatch origin for new hatches in current UCS.

**Type** : 2D point

**Saved in** : Drawing

**Initial value** : 0.0000,0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1624>