

HPSCALE system variable

1626 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2585

Function Description:

The **HPSCALE** system variable is used to set the hatch scale factors.

Type : Real

Saved in : Not saved

Initial value : 1.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1626>