

HPSPACE system variable

1628 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2289

Function Description:

The **HPSPACE** system variable is used to set the hatch space for custom hatch patterns.

Type : Real

Saved in : Not saved

Initial value : 1.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1628>