

# INSBASE system variable

1636 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2541

## Function Description:

The **INSBASE** system variable is used to store the insertion base point of BASE command by current UCS coordinates.

**Type** : 3D point

**Saved in** : Drawing

**Initial value** : 0.0000,0.0000,0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1636>