

# INSUNITSDEFTARGET system variable

1640 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2457

## Function Description:

The **INSUNITSDEFTARGET** system variable is used to set the target drawing unit value when the INSUINITS system variable set to be 0.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0 ~ 20

## System Variable Value:

0 : unspecified(no units)

1 : inches

2 : feet

3 : miles

4 : millimeters

5 : centimeters

6 : meters

7 : kilometers

8 : micro inches

9 : mils

10 : yards

11 : angstroms

12 : nanometers

13 : microns

14 : decimeters

15 : dekameters

16 : hectometers

17: gigameters

18: astronomical units

19: light years

20: parsecs

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1640>