

INTELLIGENTUPDATE system variable

1641 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2498

Function Description:

The **INTELLIGENTUPDATE** system variable is used to control the graphic refresh rate.

Type : Integer

Saved in : Registry

Initial value : 20

The default value is 20 frames per second. If confronting some problems about generating drawings or timing, users could set it to be 0 to turn it off. The **INTELLIGENTUPDATE** system variable is used to stop drawings updating until timer expired. The timer will be reset in the subsequent update.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1641>