

# INTERFERECOLOR system variable

1642 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 2602

## Function Description:

The **INTERFERECOLOR** system variable is used to control the color of interference objects.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : 1

The valid value could be "**BYLAYER**", "**BYBLOCK**", color name, and an integer from 0 to 255.

The valid value of true color is an integer strings with a RGB in front. Each integer is separated by a comma. It is input in the following way: RGB:000,000,000 .

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1642>