

# INTERFEREVPVS system variable

1644 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2281

## Function Description:

The **INTERFEREVPVS** system variable is used to specify the visual style when checking interference objects.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Frame

The **INTERFEREOBJS** system variable could only set the visual style to save in a drawing. Users could not use the PURGE command to delete the visual style specified by INTERFEREOBJS system variable.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1644>