

# INTERSECTIONDISPLAY system variable

1646 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2567

## Function Description:

The **INTERSECTIONDISPLAY** system variable is used to control the display of intersection edges in current viewport.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

Note: the **INTERSECTIONCOLOR** system variable controls the intersection polyline color only in 2D frame visual style.

## System Variable Value:

**0** :off

**1** :on

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1646>