

## LASTANGLE system variable

1650 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 2352

### Function Description:

The **LASTANGLE** system variable is used to store the ending tangent angle of last inputted arc, line, or polyline relative to XY plane in current UCS.

(Read-Only)

**Type** : Real

**Saved in** : Not saved

**Initial value** : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1650>